



99	90	81	72	63	54	45	36	27	18	9
98	89	80	71	62	53	44	35	26	17	8
97	88	79	70	61	52	43	34	25	16	7
96	87	78	69	60	51	42	33	24	15	6
95	86	77	68	59	50	41	32	23	14	5
94	85	76	67	58	49	40	31	22	13	4
93	84	75	66	57	48	39	30	21	12	3
92	83	74	65	56	47	38	29	20	11	2
91	82	73	64	55	46	37	28	19	10	1

Bühne

D  
F2

F4  
D

BRH 0.800

BRH 1.85

T9

T1

T2

T10

T3

T6

T7

T5

BRH 0.570

BRH 0.570

BRH 0.570

F1 A

F1 B

F1